

ELECTRICAL CONNECTION:

The rudder sensor has dual signal output:

S1 and G terminal connect to the first gauge
S2 and G terminal connect to the second gauge

NOTE:

Diagram is for illustrative purposes.
Always connect gauge as per the
wiring diagram for the actual gauge used.

